




MILK MASTER



Maintenance

2 maintenance steps:

- 🔄 daily rinsing
- 🔄 manual cleaning every 3 to 4 days

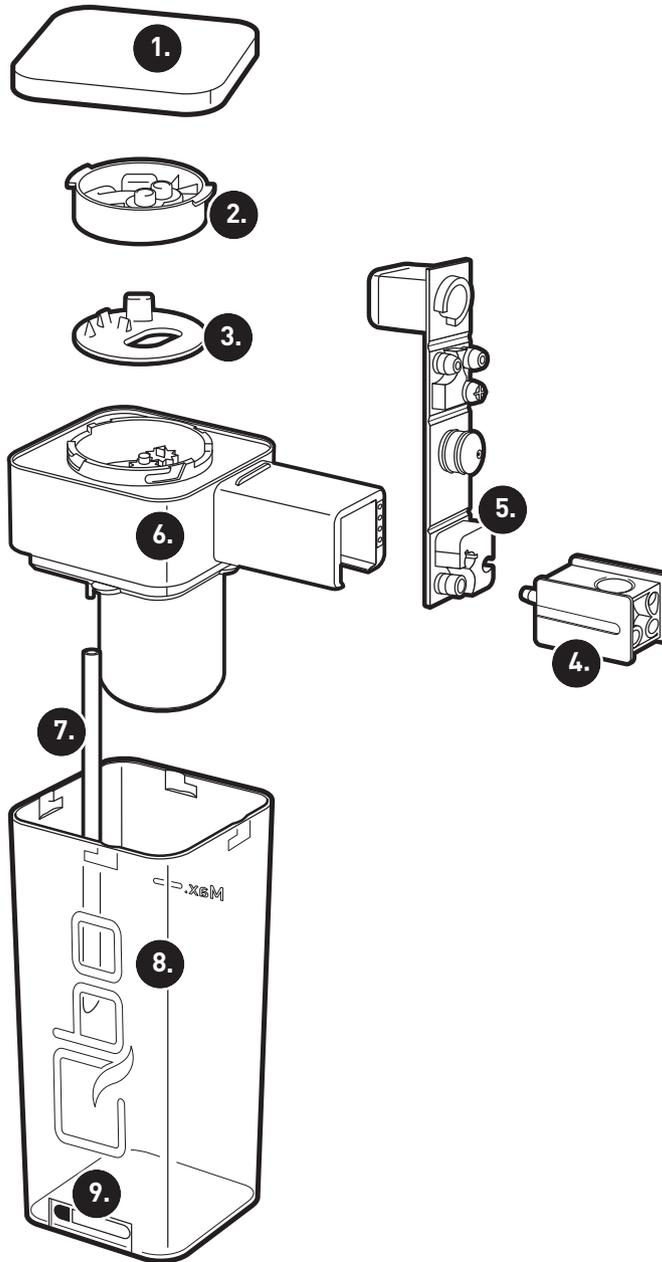

1. Lid
2. Plastic cover
3. Silicone cover
4. Milk spout adapter
5. Silicone casing with milk spout
6. Motor unit
7. Tube
8. Milk carafe
9. Temperature indicator

MAINTENANCE



First read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Milk can spoil quickly. For perfect milk froth and optimal hygiene, clean the MILK MASTER in two easy steps: Rinse out the MILK MASTER before putting it in the fridge, and clean it thoroughly every 3 to 4 days by hand.

Why should I rinse out the MILK MASTER?


To remove the majority of the milk residue. **Rinsing the MILK MASTER does not under any circumstances replace cleaning it by hand!**

When should I rinse out the MILK MASTER?

We recommend always rinsing out the MILK MASTER before putting it in the fridge. A notification will automatically be displayed on the YOU-RISTA after each drink you prepare with milk. You can rinse out the MILK MASTER in between drinks or at a later time.

Tip: With firmware version 1.21 or higher of the YOU-RISTA, we have optimized the rinsing process so that if you rinse the MILK MASTER regularly, it only needs to be washed by hand every 3-4 days.

1

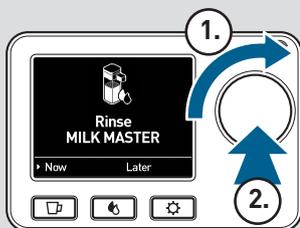

If you would like to rinse out the MILK MASTER immediately after preparing a drink with milk:

- ▷ Select **Now** (1.).
- ▷ Press the dial (2.) to start rinsing.



You will not need an extra container.

If you would NOT like to rinse out the MILK MASTER immediately after preparing a drink with milk:

- ▷ Select **Later** (1.).
- ▷ Press the dial (2.) to cancel the rinsing process.

The maintenance menu button  lights up red until you rinse out or remove the MILK MASTER later. See section "Rinsing at a later time".

2



As soon as "Rinsing of MILK MASTER completed" is displayed, the rinsing process is finished. The red lit-up maintenance menu button  will then go out.


- ▷ To return to the drinks menu, press the dial or wait about 3 seconds.

The machine will be ready to prepare another coffee once the drinks menu is displayed again.

Tip: If you would like to rinse the MILK MASTER with more water, simply fill the empty MILK MASTER with water after use and then prepare a milk specialty (e.g. "hot milk froth").

Rinsing at a later time

1

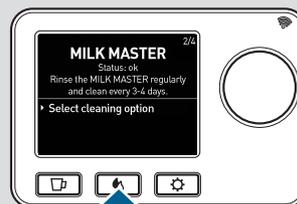

If you have interrupted the rinsing process for the MILK MASTER, it should be repeated later. Proceed as follows:

- ▷ Press the maintenance menu button .

2



- ▷ Select the menu option **Rinse** (1.).
- ▷ Press the dial (2.) to start rinsing.



You will not need an extra container.

3




As soon as "Rinsing of MILK MASTER completed" is displayed, the rinsing process is finished. The red lit-up maintenance menu button  will then go out.

- ▷ To return to the drinks menu, press the dial or wait about 3 seconds.

The machine will be ready to prepare another coffee once the drinks menu is displayed again.

3

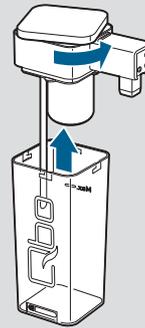

- ▷ Remove the motor unit from the milk carafe.
- ▷ Turn the lid counter-clockwise as far as it will go and remove it from the motor unit.
- ▷ Clean the carafe and lid in warm water with mild dish soap.

i In case there is still milk in the carafe that you would like to use later, place the carafe in the fridge with the lid on.

MANUAL CLEANING


Why should I clean the MILK MASTER manually?

To ensure optimal hygiene, high-quality milk froth, and a long service life of the appliance. **Manual cleaning should be carried out in addition to regular rinsing.**

When do I have to clean the MILK MASTER manually?


In addition to rinsing the MILK MASTER out, you should clean it manually every 3 to 4 days.

1

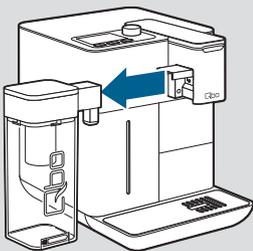


- ▷ Take the MILK MASTER out of the machine.

2

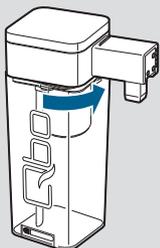

- ▷ Turn the motor unit counter-clockwise as far as it will go.

4

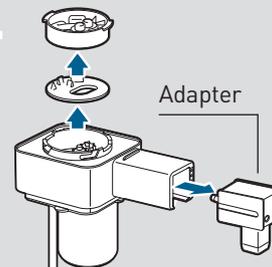



- ▷ Take off the transparent plastic cover and blue silicone cover.
- ▷ Carefully pull out the milk spout adapter.

5




- ▷ Unwrap the silicone casing that is fitted around the milk spout adapter.

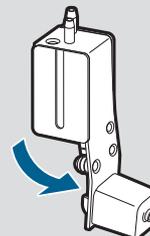

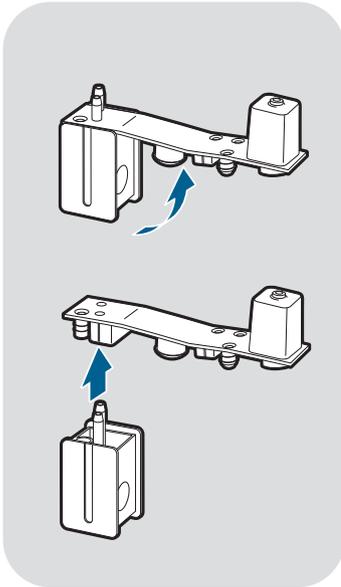


- ▷ Remove the silicone sleeve from the milk spout adapter.

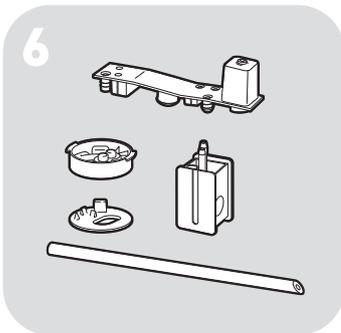


- ▷ Carefully clean the different parts illustrated here in warm water with a little dish soap. Use a soft toothbrush if necessary.

i All parts except for the milk carafe and the motor unit are also dishwasher-safe.

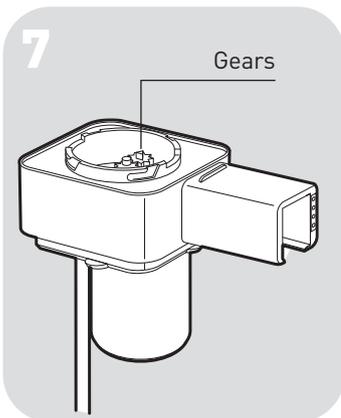


- ▷ Clean the opening in the top of the motor unit and the area under the gears with warm water and mild dish soap. Turn the gears somewhat when doing so to clean out any possible remaining milk residue underneath. **Warning! The gears cannot be removed.**
- ▷ Carefully dry all parts or let them dry overnight.

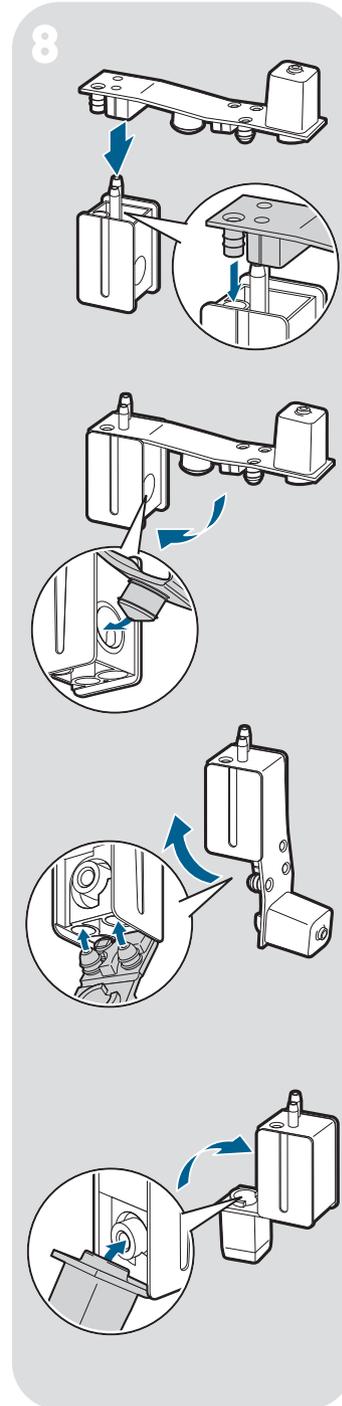

- ▷ Wrap the silicone casing back around the milk spout adapter. **Tip:** If you moisten the silicone casing with a little water first, it can be inserted more easily into the openings in the adapter.
- ▷ Firmly press in the silicone casing on all sides so that it is correctly inserted in all openings in the adapter and lies flat.


i If the silicone casing does not fully seal the milk spout adapter, the froth will not be able to thicken and the milk will spray out when being dispensed.

9

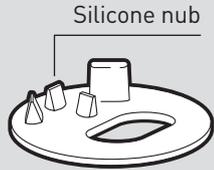


- ▷ Make sure that the three small silicone nubs on the silicone casing are not pressed in after cleaning, or the milk cannot be properly frothed.
- ▷ Simply press the silicone nubs back out if necessary.

12

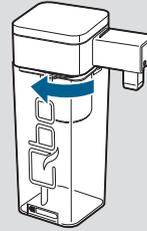

- ▷ Turn the motor unit clockwise until firmly in place.


10

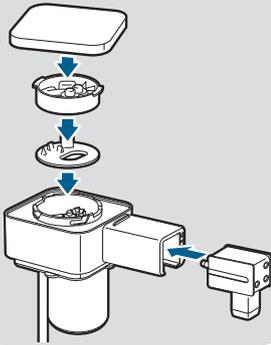

- ▷ Reassemble the motor unit.
- ▷ Once finished, make sure that all parts are correctly connected and secure. Otherwise the milk cannot be properly frothed!

Please note: If you would like to treat your MILK MASTER and freshen it up, take advantage of the MILK MASTER fresh set. It contains all of the parts that come into contact with milk when milk is being frothed.

11

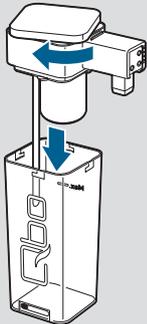

- ▷ Turn the lid clockwise as far as it will go.
- ▷ Place the motor unit back on the milk carafe.